


-01-

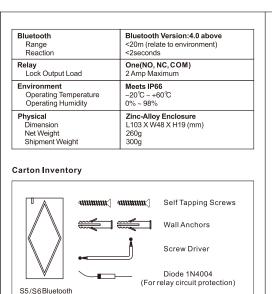

Drill 2 holes(A,C) on the wall for the screws and one hole for the cable.


-02-


Knock the rubber bungs to the screw holes(A,C). fix the back cover firmly


thread the cable through the cable hole(B)


on the wall with 4 flat head screws


Attach the unit to the back cover.

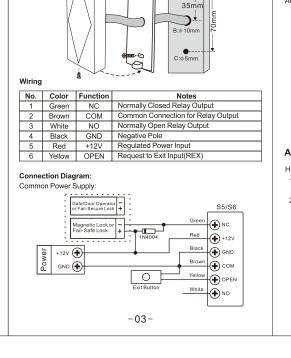

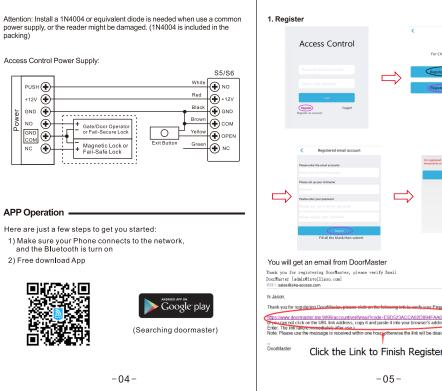

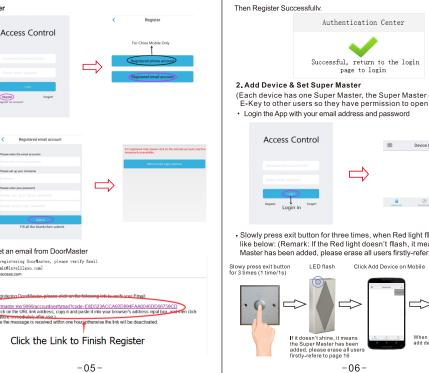

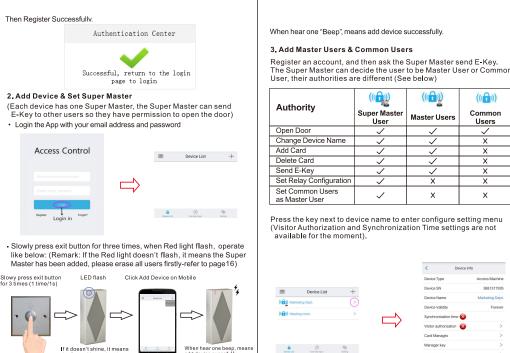

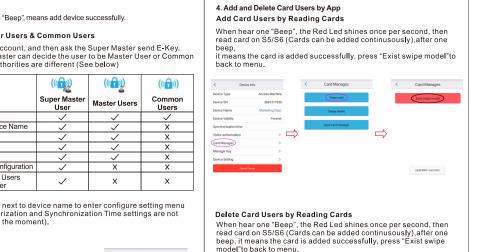

C Device Info

-08-

Visitor authorization

Card Manages Manager key

-07-

